

**21—85.1(215) “Sensibility reciprocal” defined.** The term “*sensibility reciprocal*” is defined as to the weight required to move the position of equilibrium of the beam, pan, pointer or other indicating device of a scale, a definite amount.

This rule is intended to implement Iowa Code section 215.18.